

# Vent Valve, Rear Cover, Axle & Pinion Seals In 5 Easy Steps

1. Connect to the Battery.
2. Insert Exhaust Cone into Differential & Insert Smoke Supply into Exhaust Cone.
3. Push the Smoke Wizard "START" Button.
4. After Smoke Comes Out of the Vent, Pinch off the Vent Hose to Allow Pressure to Build.
5. Use a Bright Light and Look for Smoke Exiting the Leak(s).



**Using Diagnostic Smoke<sup>®</sup>  
for Leak Detection !**