
Find EVAP Leaks in 6 Easy Steps


- 1. Connect to the Battery.
- 2. Connect to vehicle's EVAP system.
- 3. Close vent solenoid.
- 4. Push the Smoke Wizard START Button.
- 5. Verify if EVAP system has a leak.
- 6. Find leaks by viewing exiting smoke and/or viewing the ultraviolet-activated fluorescent dye deposited at the leak(s).





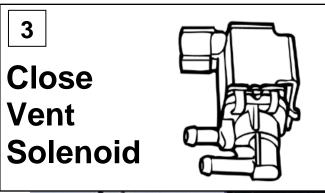



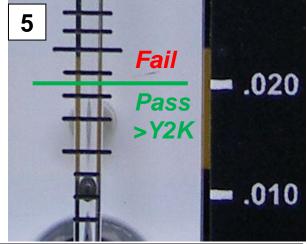



6

Look for the exiting smoke / UltraTraceUV® dye deposited at the exact location of the leak.

